






AP-309674 (Installation Instructions for 16+ Tacoma Double Cab Sun- roof Molle Rack, Kit AP-309676)

	NOTICE Read instructions completely before installing this product. Refer back to the instructions frequently during installation.		CAUTION Flying Object Hazard. Fluid Splash Hazard. Wear safety glasses at all times when working on vehicle.
 WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov			




AP-309674

1. Pop off the plastic covers on each side of the factory grab handles. Remove the inner locking clips and the grab handles from the cutouts in the roof. Repeat this process on the other side of the vehicle.



2. Mount any molle accessories you plan on using to the rack.

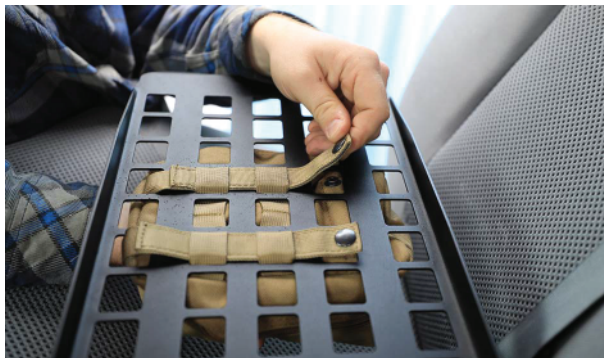

3. Insert the provided plastic nuts in the holes in the roof. Make sure to orient the slot in the back of the plastic nuts horizontally as shown.



4. Position the rack on the interior of the roof and align the mounting slots in the rack with the plastic nuts in the roof. Use the provided hardware to mount the rack to the roof. Hand-tighten the mounting screws being careful not to strip the plastic nuts. If desired, place after-market grab handles over the mounting holes in the rack and reinstall the mounting bolts.

